



REVISIONS				
ZONE	REV	DESCRIPTION	DATE	DRAWN
	A	EG13078技轉單	12/31'13	Tyron Wang

Instruction Sheet

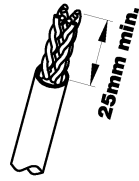


Step 1:
Strip off at least 25mm of jacket from end of cable.
NOTE: IDC is suitable for 22-24 AWG wires.

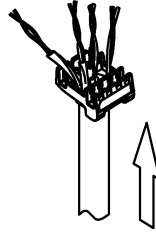


Step 2:
Insert the wires into the cap through the holes.




Step 3:
Lay the wires to the correct positions based on the color code. (T568A/T568B)

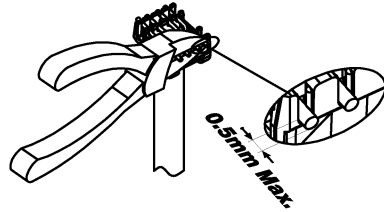

Step 4:
Cut the excess wires off. The tips of the wires should protrude no more than 0.5mm.

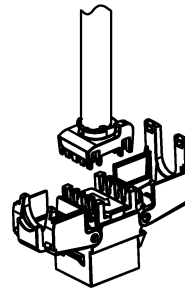

Step 5:
Put the cap on the IDC tower. The arrows on the jack and the cap should face the same direction. Put the cap into position.

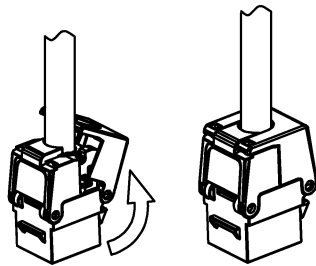


Step 6:
Close the jaws until hearing the click.

Disassembly Instruction:

Step 1:
Insert the slotted screwdriver into the slot and rotate to open the jaws.

180.00

120.00

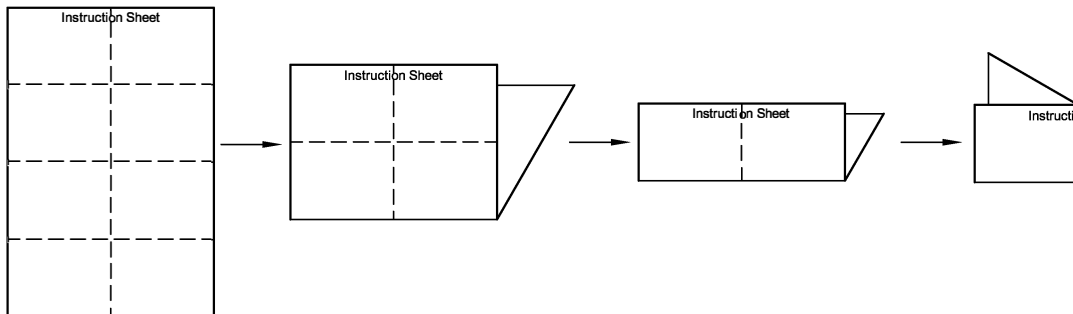

UNLESS OTHERWISE SPECIFIED: TOLERANCES			PROJECT ID	
INCH	MM	ANGULAR	FILE	DATE
.XX ± .015	.XX ± 0.2	X ± 1'		
.XX ± .008	.XX ± 0.1	X ± .5'		
.XXX ± .004				
MATERIAL	DRAWN <i>Tyron Wang</i>		08/27'13	
SURFACE	CHECK			
FINISH	APPROVED			
SIZE A4		DRAWING NUMBER	PART NUMBER	REV A
SCALE 1 : 1		UNIT (MM)	SHEET 1 OF 1	

說明書